 


GD1500, GM1500

Grinding bench

USER'S MANUAL

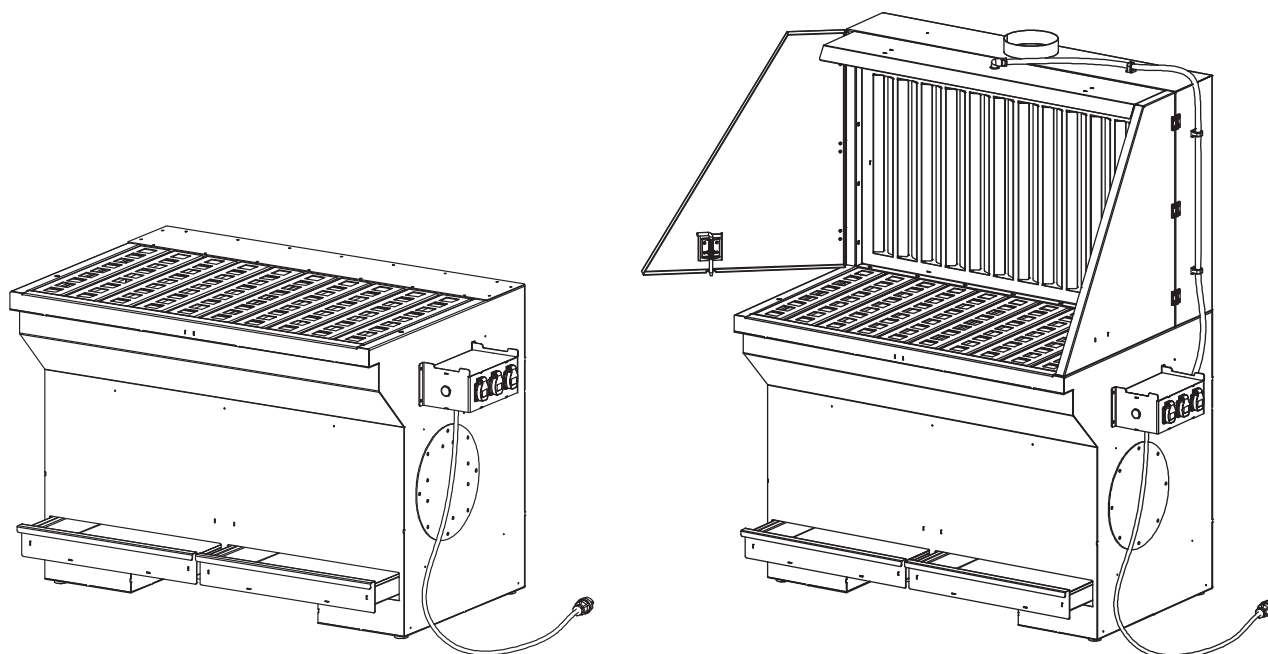

GRAPHIC SYMBOLS



important information



3D file or preview available



you will need tools, sub parts, accessories



keep away from source of high temperature



warnings, important notes



use respiratory protective equipment



protect from noise or eye damage



switch off before proceeding

1. Purpose of this instruction	3
2. Equipment arrival	3
3. Safety	4
3.1 General informations	4
3.2 Remaining risk	4
3.3 Fire risk	4
3.4 Emergency situations	4
4. Product intended use and reservations	4
5. GD1500 device configurations	5
6. GM1500 device configurations	5
7. Construction	6
8. Dimensions of GD1500	7
9. Dimensions of GM1500	8
10. Technical data	8
11. Work environment	9
12. Transport and storage	9
13. Assembly	9
14. Use	9
14.1 Start-up	9
15. Maintenance	9
15.1 Emptying the dust drawer	9
15.2 Service	10
15.3 Spare parts	10
16. Troubleshooting	10
17. Disposal	10
18. Eelectrical diagram GD/GM	11
19. General terms and conditions of warranty	12
20. EC declaration of conformity	13

1. Purpose of this instruction

This user's manual contains GD1500, GM1500 (and their configurations S, L, LS) grinding bench use and maintenance information. GD1500 or GM1500 user should become acquainted with this manual to learn about unit construction, principles of operation and means of its safe use. Manufacturer is not responsible for any consequences arising from the use of the unit against its intended purpose. Manufacturer reserves the right to make changes to improve performance and operational properties of the product in the future without prior notice.

2. Equipment arrival

Upon arrival the user needs to thoroughly inspect the equipment and make sure there was no damage caused by the shipping carrier. If there is damage, the user needs to immediately contact their dealer. Transport of the device on a pallet can be done with a manually lifted forklift or a self-propelled lift truck. The configuration of the delivered device can be found on the nameplate.

The user should ensure that the following parts are provided in the GD1500 and GM1500 sets:

- replaceable galvanized work surface,
- dust drawers.

In case of lack of any listed items, please contact the dealer.



If the package or device is damaged upon delivery the user needs to immediately contact the dealer and draw up a protocol with a representative of the shipping company (many shipping companies consider acceptance of the shipment to be sufficient to avoid liability for damage caused during shipping).

3. Safety

3.1 General informations

The device has been designed on the basis of the applicable technical knowledge and safety rules contained in the relevant standards harmonized with the Machinery Directive. Use appropriate personal protective equipment according to general health and safety rules. All electrical work must be carried out by qualified personnel. The machine equipped with the accessories complies with the required stability conditions. The device should be installed on flat, properly hardened surfaces.

3.2 Remaining risk

The grinding bench will not ensure safe working unless the workpiece is positioned within the operating area of the grate. Before starting work, ensure that the extraction system connected to the workstation has been activated.

3.3 Fire risk

Do not extract burning or glowing material (including cigarettes). Do not mix combustible material such as wood dust and rags with grinding dust. Remove excess oil or grease from the steel before welding.

3.4 Emergency situations

In case of discovering unusual phenomena such as increased noise or smoke you should:

- disconnect the device from the power source (device configurations S, L, LS)
- try to suppress the possible flame source by using a powder extinguisher
- notify relevant services at the workplace

4. Product intended use and reservations

GD1500 and GM1500 grinding bench can be operated without restriction in the technical areas intended for permanent human habitation. It is designed for extracting air from dust and gases generated during manual grinding with power tools. Requires connection to the exhaust installation completed with a filtering device.



Manufacturer does not recommend use of the unit for:


- work in an explosive environment and extraction of explosive substances or gases
- extraction of hot gasses (more than 45°C/113°F continuously)
- sucking cigarettes, oiled tissues and other burning particles or objects
- suction of liquid substances, oils, oil mist
- sticky liquids




Store in dry and airy rooms. Protect against possibility of shifting during transport.

5. GD1500 device configurations

GD1500 grinding bench with capture in a horizontal worktop can be connected to a central suction installation. Connection diameter and (if present) sockets are on the left or right side, depending of the order.

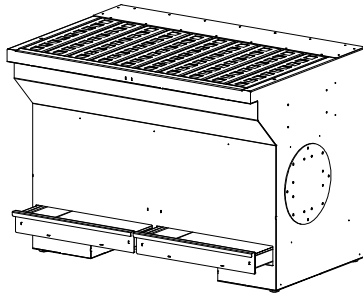


GD1500
Basic version

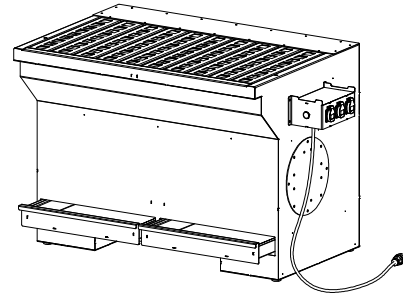


GD1500S
Equipped with electrical sockets.

6. GM1500 device configurations


The GM1500 grinding unit with back and horizontal wall capture can be connected to a central suction installation. Sockets (if present) are on the left or right side, depending of the order.

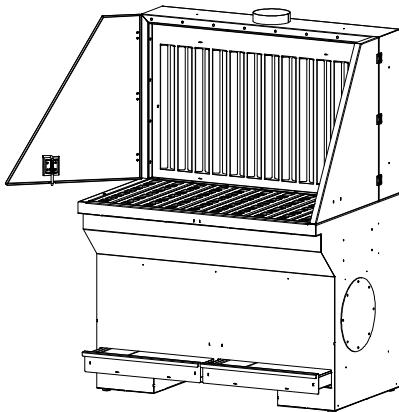


GM1500
Basic version

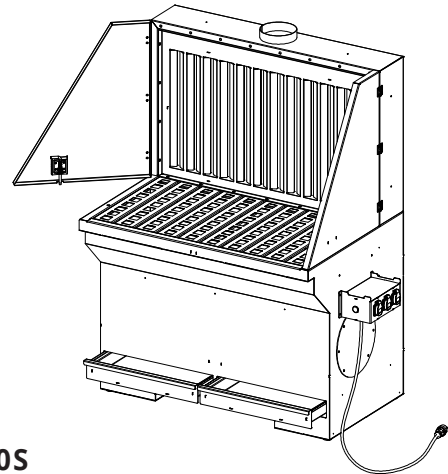

GM1500S
Equipped with electrical sockets.

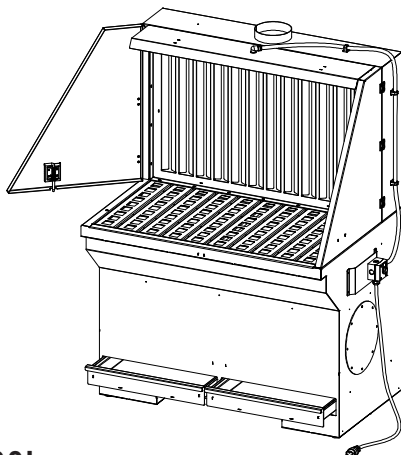



GM1500L
Equipped with LED lighting.

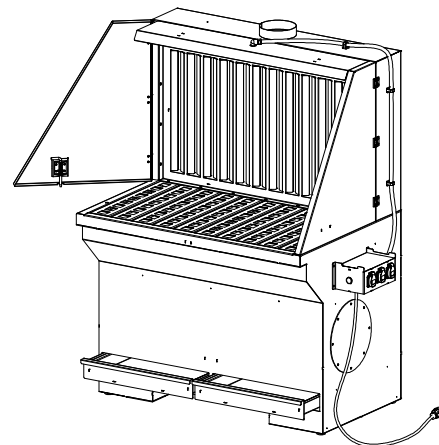




GM1500LS
Equipped with LED lighting and electrical sockets.

7. Construction

1. Base of the grinding bench
2. Top with grate and extraction
3. Side alls
4. Rear wall with extraction
5. Drawers for dust
6. LED lighting (L, LS configuration)
7. Outlet
8. Connection of LED lighting (L, LS configuration)
9. Electrical sockets (S, LS configuration)
10. Connection to a central suction installation - left or right side depending of the order (only GD)
11. Power cable (S, L, LS configuration)
12. Feet for leveling the structure
13. Tool shelf (S, LS configuration)
14. LED lighting switch (L, LS configuration)

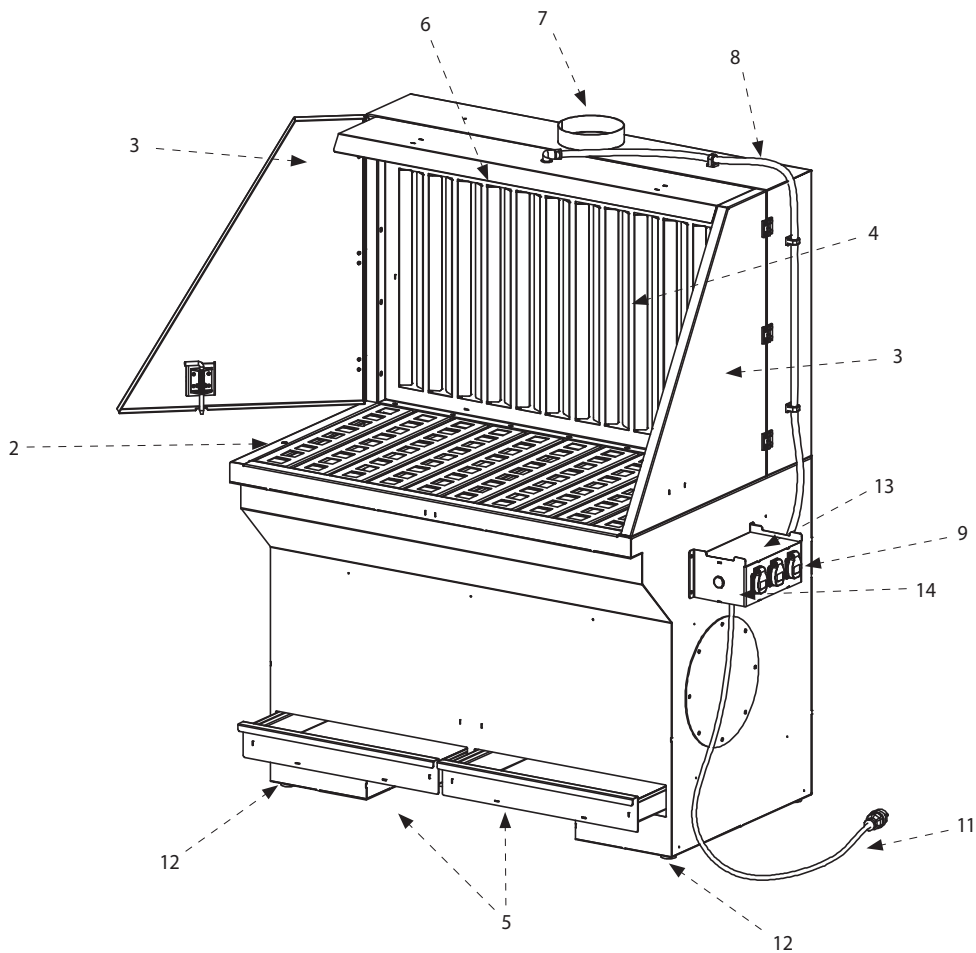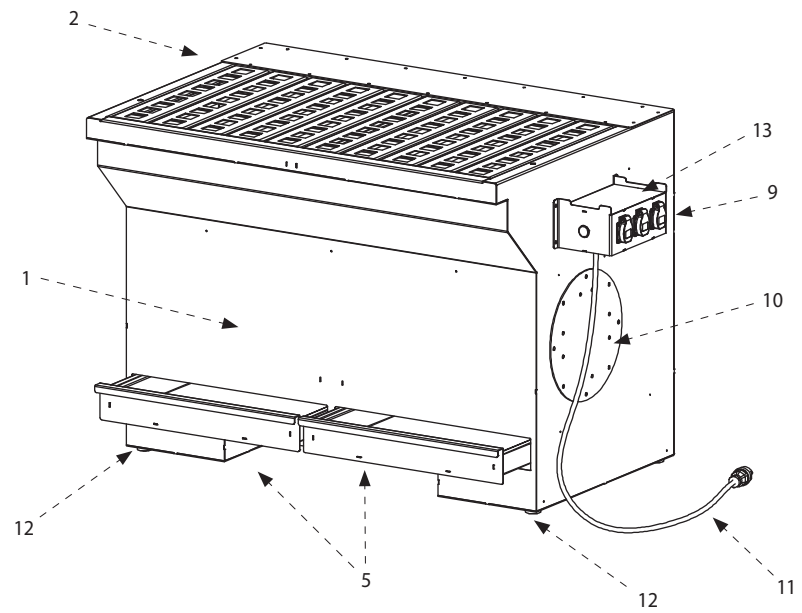


8. Dimensions of GD1500

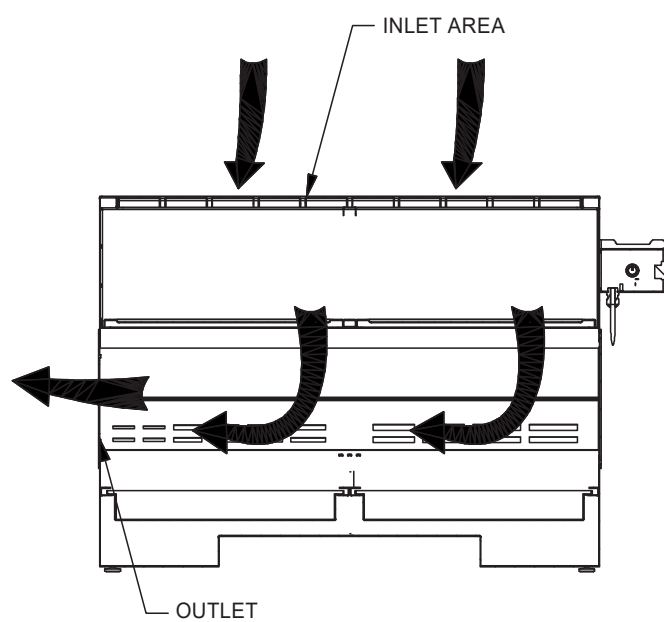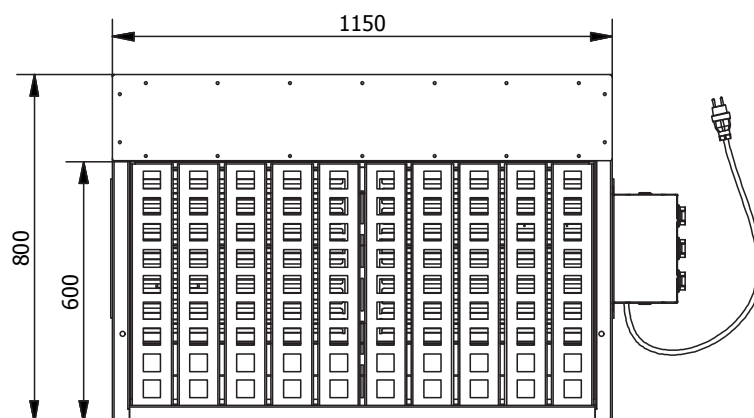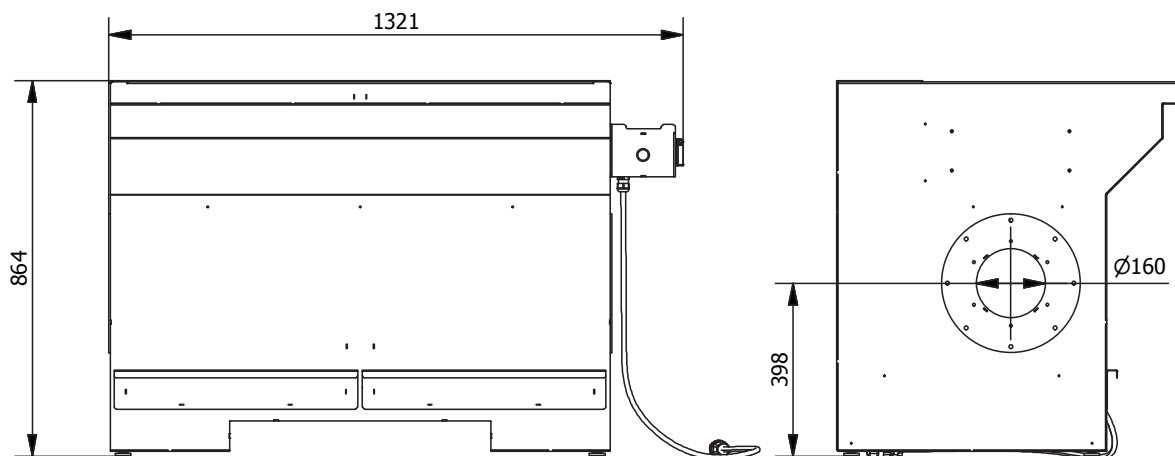

All dimensions are in [mm]

9. Dimensions of GM1500

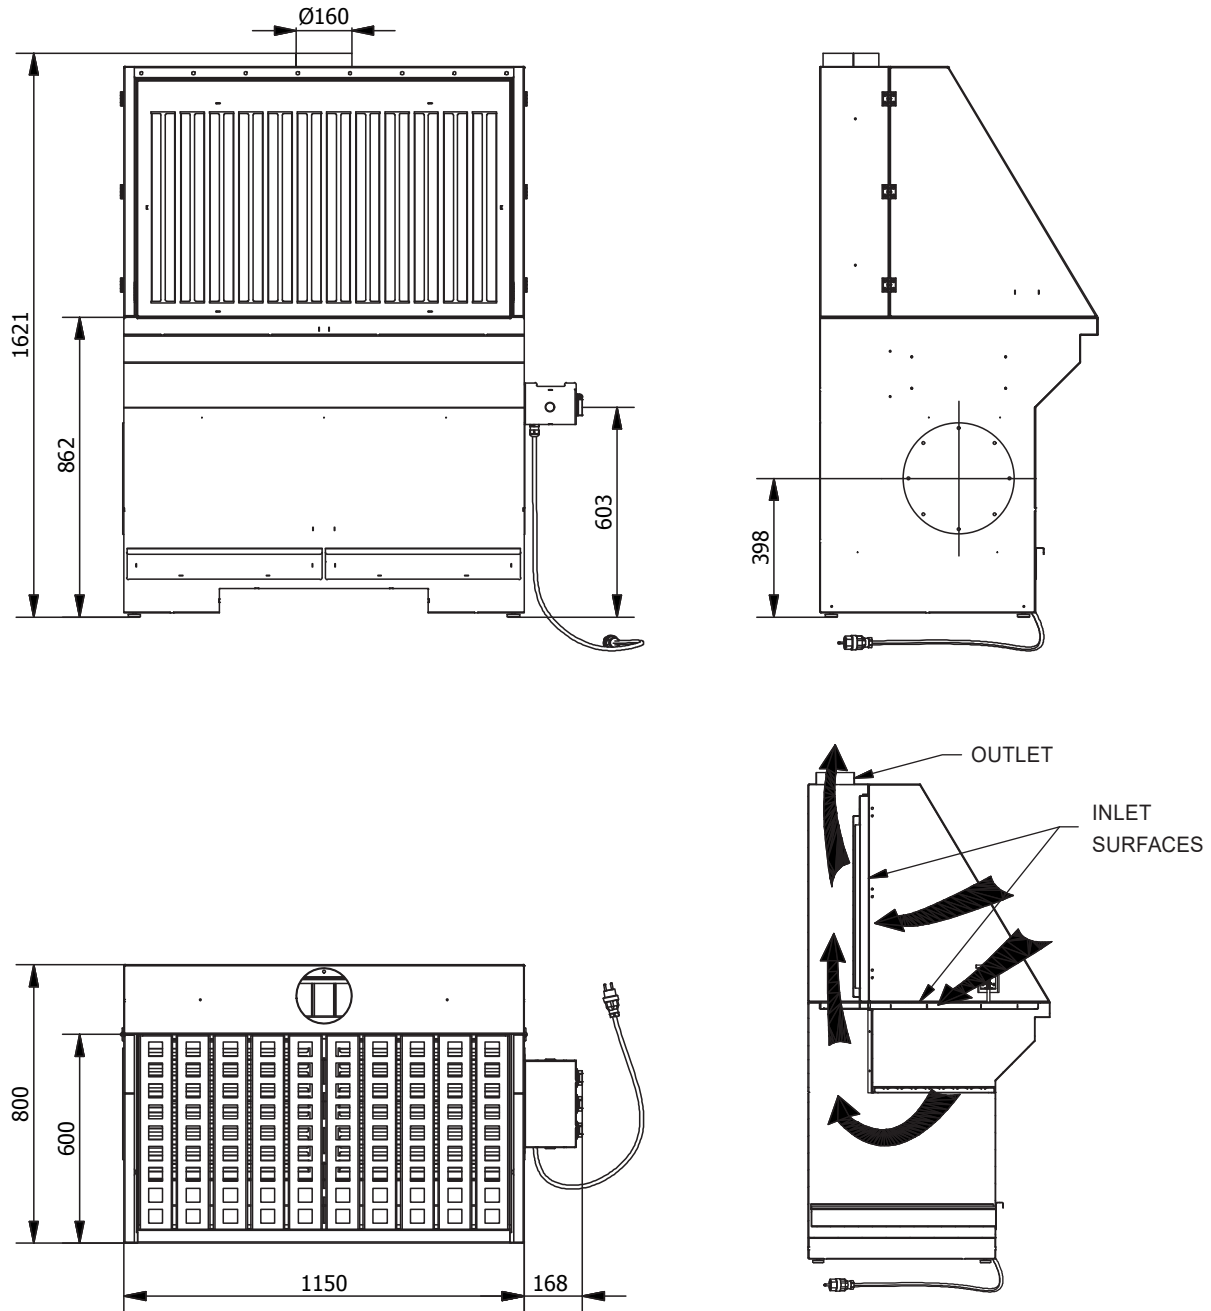

All dimensions are given in [mm]

10. Technical data

Recommended air flow [m ³ /h]	1500
Power supply [V]/[Hz]	1x230/50 (configuration L, S and LS)
Capacity of the dust drawer [l]	2x17
Weight - GD1500 [kg]	125
Weight - GD1500S [kg]	125
Weight - GM1500 [kg]	160
Weight - GM1500S [kg]	165
Weight - GM1500L [kg]	160
Weight - GM1500LS [kg]	175
Maximum load [kg]	100

11. Work environment

Grinding bench unit can be operated without restriction in the technical areas intended for permanent human presence.

12. Transport and storage

Transport of the device on a pallet can be done with a manually lifted forklift or a self-propelled lift truck. Store in dry and airy rooms.

13. Assembly

The machine equipped with the accessories complies with the required stability conditions. The device should be installed on flat, properly hardened surfaces.

14. Use

Read the safety section before using the machine.

14.1 Start-up


The device should be placed on a flat hard surface, levelled with adjustable feet and then connected to an exhaust system. For GM configuration, the connection diameter is 160mm. The nozzle is located on the upper surface of the rear wall of the bench. In the GD configuration, the connection diameter is also 160mm. It is located on the side wall of the stand (left or right side depending of the order). The GM grinding stand has swiveling side shields. This allows you to place on the grid elements longer than the bench dimensions.

15. Maintenance

In accordance with the service chapter, the dust drawers must be emptied regularly.

15.1 Emptying the dust drawer

The drawer collects dust from grinding processes. Check the filling status of the drawer and empty it regularly.

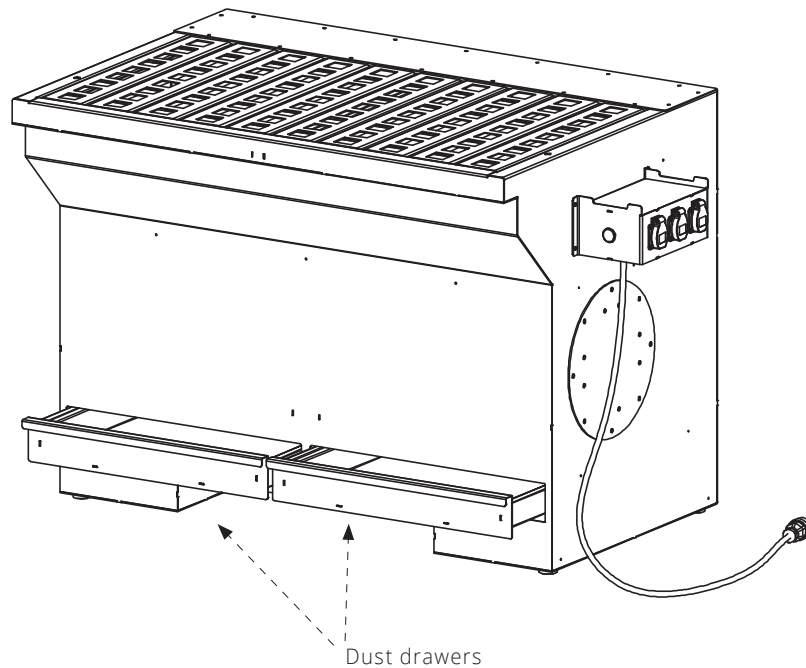

15.2 Service

DAILY	MONTHLY	YEARLY
Cleaning of waste drawer	Visual inspection for signs of corrosion	Check the ground connection and wire condition (configuration L, S, LS)

15.3 Spare parts

In order to determine the type of spare parts, contact an authorized distributor or the Menegon company. Prepare the data from the nameplate: device name, serial number and part number. Use only original parts supplied by Menegon.

16. Troubleshooting

SYMPTOMS	POSSIBLE REASONS	ROCEDURE
Low air flow	Too much waste in dust drawers.	Empty the dust drawers.
	Unclosed dust drawers.	Completely close the dust drawer.

 
17. Disposal

Before dismantling, the machine must be disconnected from the power source. The area of work should be properly separated and marked. Plastics and metals must be sorted as far as possible. Disposal must be carried out in accordance with local legal requirements. The machine filters should be disposed of in compliance to relevant local regulations.



Dust on the internal parts of the device can get into the respiratory tract and lead to skin irritation. Appropriate health and safety protection must be taken during disposal work.

18. Eelectrical diagram GD/GM

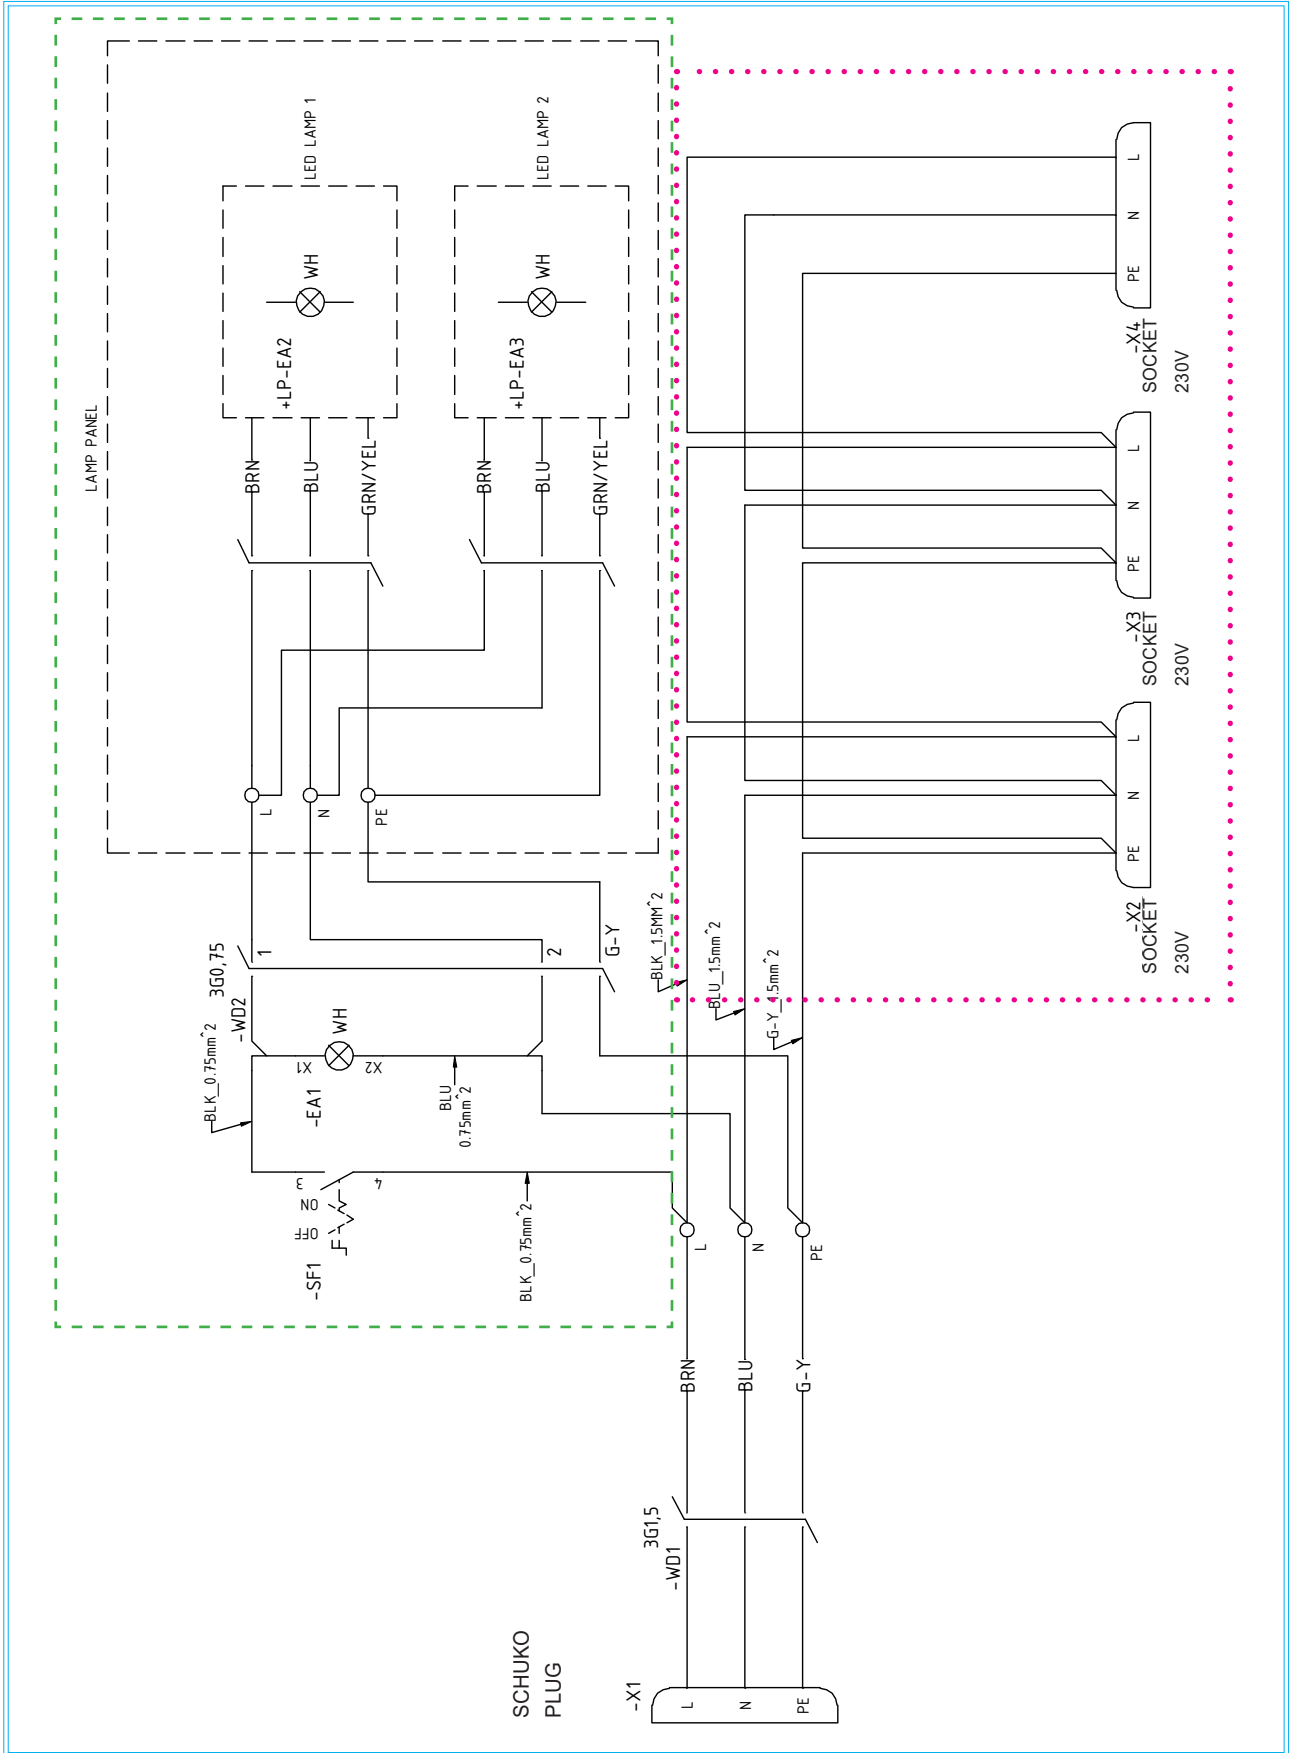

19. General terms and conditions of warranty

1. The present warranty is granted by Menegon Spółka z o.o. with its registered office in Mokry Dwór (postcode 83-021) at Mokry Dwór 6c, Tax ID No. (NIP): 583-27-65-135, National Business Registry No. (REGON): 192622385, entered into the Register of Entrepreneurs of the National Court Register at the District Court for Gdańsk-Północ in Gdańsk, 7th Commercial Division of the National Court Register, under No. KRS 0000072042, hereinafter referred to as the "Manufacturer" or "Warrantor".
2. The provisions hereof shall apply only to purchasers who are entrepreneurs understood as natural persons, legal persons or organisational units referred to in Article 33(1) §1 of the Civil Code, pursuing business activity on their own account.
3. The Manufacturer shall grant warranty for the period of 12 months as of the date of purchase, however not longer than 18 months of the date of manufacture (for possible extension of the warranty period please contact the authorised sales representative).
4. The warranty shall include defects caused by the fault of the manufacturer, i.e. physical defects of the Manufacturer's Products arising from reasons inherent in the product and resulting from the use of defective materials, caused by structural errors, or defective workmanship, provided that operation and maintenance of the device was performed always in accordance with the appended Operation and Maintenance Documentation and that the other conditions specified herein have been met.
5. The warranty shall not include parts of devices subject to normal wear, consumable materials (filters, gaskets, bulbs, fuses, etc.).
6. A warranty repair shall take place by means of replacement of the damaged components with others - the replaced components become the property of the Warrantor. If it is impossible to determine the cause of damage, the Warrantor shall repair the product within 14 business days of the date of reporting the defect at the latest, unless there is a need to import untypical or not easily available parts.
7. The warranty shall not include: mechanical damage or damage resulting from improper operation, improper exploitation, natural wear of materials, partial or as a whole, random events or abnormal atmospheric phenomena (force majeure events), improper transport, storage or use, improper installation or installation performed by an entity which is not authorised by the Manufacturer, modifications or structural changes made by the user or third parties without the consent of the Manufacturer.
8. Loss of warranty shall take place in case of: independent repair and modifications without a written notification and consent of the Manufacturer, breaking the seals placed by the Manufacturer, using other consumable components that those indicated and recommended by the Manufacturer.
9. The Warrantor shall be liable for physical defects only up to the standard value of components. The standard value of components shall be understood as their value according to the prices applied by the Manufacturer on the date of warranty repair.
10. The warranty shall not include losses caused by downtime while awaiting for warranty repair and property damage, i.e. indirect and direct losses and costs connected with the need of disassembly and reassembly of the device. The Warrantor shall not be liable for any lost profits.
11. This warranty shall only be valid if the invoice for purchase of the products was paid and if the maintenance inspections are performed each year (in case of extension of the warranty period).
12. The Warrantor shall reserve the right to charge the costs of inspection to the claimant if the claimed product proved to be functional and if the defects to be repaired or the components to be replaced are not subject to warranty or the terms and conditions of the warranty exclude the liability of the Warrantor.
13. A defect shall be reported within 14 days after its discovery. Failure to comply with the above deadline shall result in expiration of the warranty entitlements.
14. The Warrantee shall report a failure, defect or fault only in writing by sending a complaint by e-mail or letter to the address of the manufacturer. The complaint shall contain an accurate description of the defect and indicate the date on which it occurred.
15. The Warrantor shall handle the complaint within 14 days of delivery of the defective goods to the Warrantor or verification at the location where the goods are installed, subject to a possibility of extension of the above period if it is necessary to perform detailed technical tests, of which fact the Warrantor shall immediately inform the Warrantee.
16. The Warrantor shall inform the Warrantee on handling the complaint in writing, by phone, fax or e-mail.
17. If the guarantee claim is accepted, the Warrantor shall decide each time on the repair of the defective product, its replacement with a product free of defects, reduction of its price or replacement with a product of the same intended use and similar technical parameters if the product subject to claim was withdrawn from the offer.
18. The defective product shall be repaired within 30 business days of the date of handling the complaint. If there is a need to import spare parts from abroad, perform additional laboratory testing, etc., the deadline for repair may be extended until the time of performance of necessary actions, however not more than up to 90 business days of the date of handling the complaint. The deadlines specified in the preceding sentences shall apply also to replacement of the product with a product free of defects, reduction of its price and replacement of a defective product with a product of the same intended use and similar technical parameters respectively.
19. In connection with the granted warranty the parties hereby exclude application of the provisions of the Civil Code regarding warranty for defects, therefore the Customer shall not be entitled to any other claims resulting from defects of the delivered product apart from those referred to above.
20. Any disputable matters arising in connection with the granted warranty shall be settled by the court competent for the registered office of the Manufacturer.
21. This warranty shall be governed by the Polish law.

20. EC declaration of conformity

menegon

The manufacturer:

Menegon Sp. z o.o., Mokry Dwór 6c, 83-021 Mokry Dwór, Poland

Confirms the following products:

Grinding table: GD1500, GD1500S, GM1500, GM1500S, GM1500L, GM1500LS

Meets the requirements of the following European directives:


- Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006. on machinery and amending Directive 95/16/EC (recast).
- Directive 2014/35/EU of the European Parliament and of the Council of 26 February 2014. on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits (recast).

and the following standards:

- EN 60204-1:2010 Safety of machinery - Electrical equipment of machines - Part 1 General Requirements.
- EN 12100:2012 Safety of machinery - General principles for design - Risk assessment and risk reduction.
- EN 13857:2010 Safety of machinery - Safety distances to prevent reaching the upper and lower limbs to hazardous areas.

Confirmed in: PL-Mokry Dwór
Confirmed on: 2018-03-04

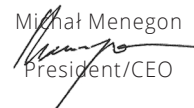

Michał Menegon

President/CEO



www.menegon.com.pl

Authorized representative